


PetTec

Interactive Ball

Single & Double Set

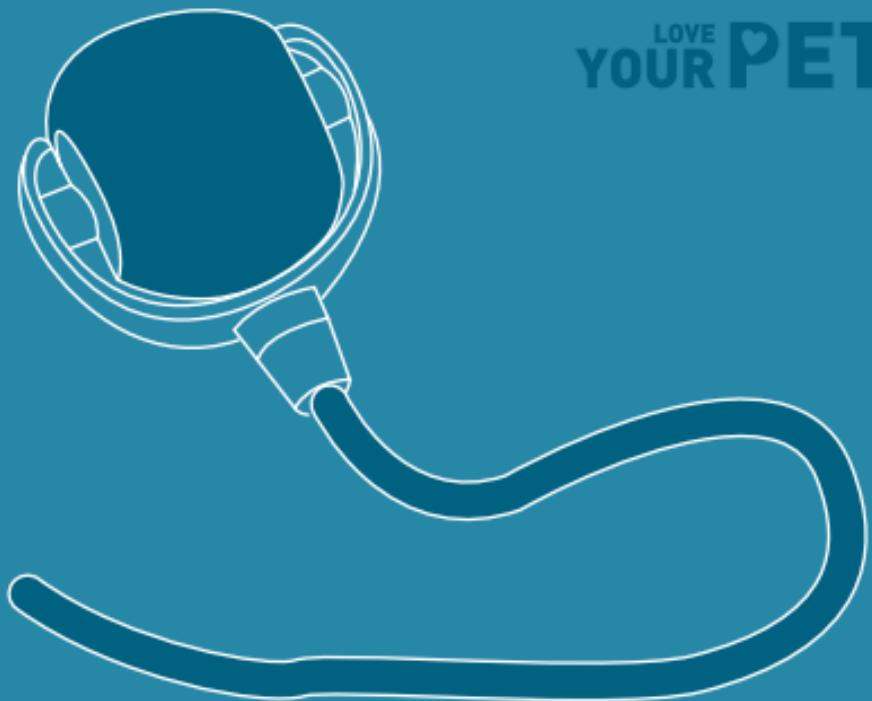

LOVE
YOUR PET



HERE WE GO...

Thank you for choosing our toy. With the PetTec Pet Toy Interactive Ball your pet will always be busy.

Important safety instructions

READ ALL INSTRUCTIONS AND WARNINGS IN THIS OPERATING MANUAL BEFORE USING THE PLUSH PET TOY.

1. Please do not immerse the Pet Toy in water and do not soak the Pet Toy when the electronics are inside the Pet Toy.
2. Do not immerse the device in other liquids either. The mechanism that makes the fish move is not waterproof. If the fish is dropped in the water, the electronics will get damaged.
3. Do not put the Pet Toy in the microwave or in an oven. Do not expose the Pet Toy to high temperatures.
4. Do not expose to hot sources such as fire or prolonged direct sunlight.
5. The Pet Toy is designed as a toy for cats! The Pet Toy is not intended for any other use.
6. Stop using the product if the battery begins to smell or smoke.



7. If you experience any malfunction, contact our customer service directly.
8. The toy is designed for indoor use only, leaving it outside may cause it to dampen and damage the mechanism.
9. Although it is primarily a toy for your pet, always be aware of your duty of supervision towards your child.
10. Please remember that the Pet Toy is a toy and is not suitable for use with real babies and small children.
11. The Pet Toy can be cleaned if necessary with a damp (not wet) cloth. Please do not bathe the Pet Toy.

Notes on the built-in battery

1. For full performance and maximum operating time of the product, we recommend fully charging the integrated battery.
2. Only use the battery we have installed and do not unscrew the electronics yourself.
3. If the toy is not used for a longer period of time, move the switch to the „OFF“ position to increase the battery life.
4. If any moisture has penetrated the electronics, please dry with a cloth.



5. Recharging integrated batteries may only be carried out under adult supervision.
6. Do not throw the electronics into a fire as they may leak or explode.
7. Please also keep the electronics away from hot sources such as ovens or a cooker.

Battery note

As the safety of our customers is of particular concern to us, we would like to point out that this item is battery-operated. Please check the item regularly for damage and replace if necessary. Keep the damaged item out of the reach of children. Always make sure that the electronics of the Plush Toys are not accessible!

PACKAGE CONTENTS



Single Edition

- Interactive toy ball in blue
- 1 Replacement sleeve in red

Double Set

- 2 Interactive toy balls in blue + red
- 1 Replacement sleeve in grey
- USB-C charging cable



OVERVIEW I

Multifunction Button

Press 2 sec.:

On / Off


Short press:

Change mode

» Fast Mode

» Slow Mode

» Interactive Mode

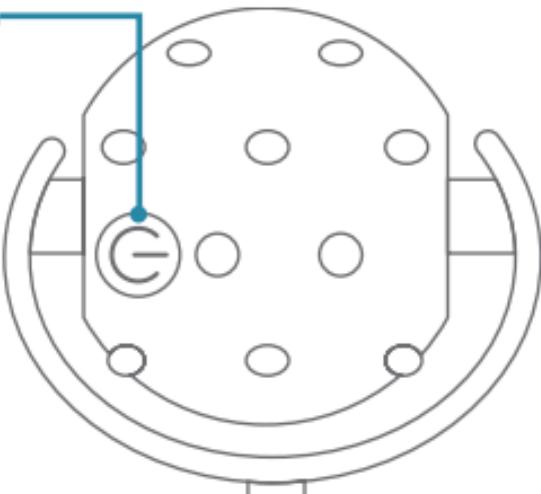

Thread for attaching
the cord


String for the pet toy



OVERVIEW II Front view of ball rotated

Pet toy axle
for removing the ball for
cleaning or changing
the silicone cover

USB-C charging port

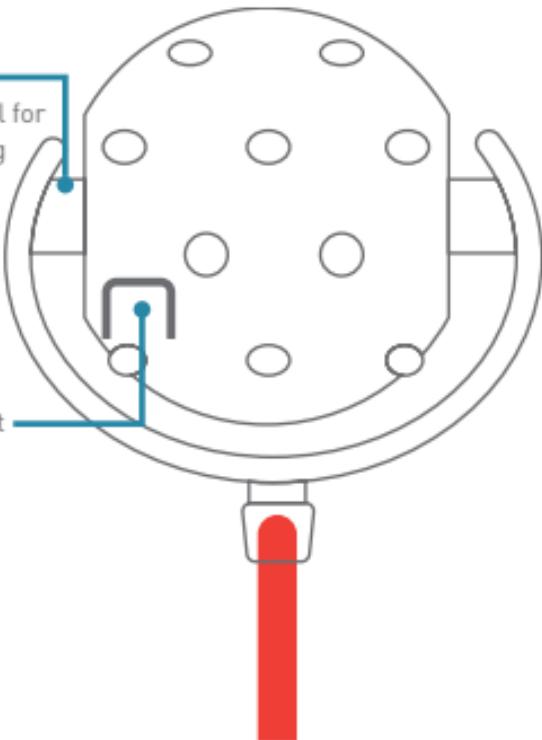




OVERVIEW III Side view

Status LED
in the ball axis

Colors:

- red - charging information
- blue - fast mode
- purple - slow mode
- green - interactive Mode

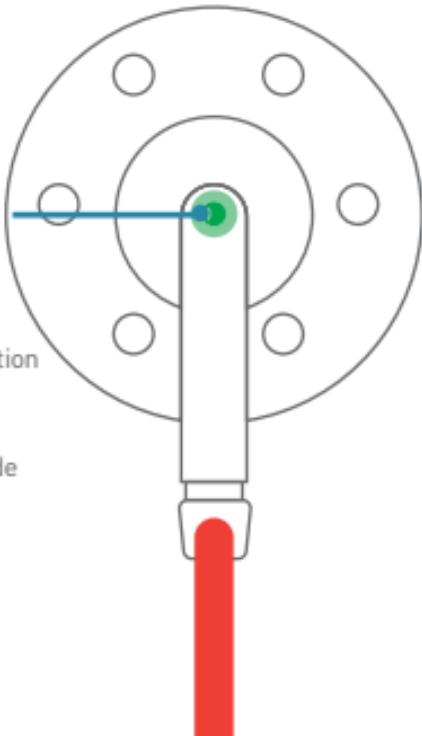



STATUS LED in the ball axle

- **Flashing red:** Toy is charging.
- **Red light:** Fully charged.

CHARGING

- When you use the pet toy for the first time or every time the status LED  flashes red quickly, fully charge the toy.
- Open the silicone element that covers the USB-C charging socket.
- Insert a USB-C charging cable and connect it to a mains plug (not supplied).
- Charge the pet toy until the status LED  lights up permanently red.



TECHNICAL DETAILS

Colour Single Edition Blue (+ replacement sleeve in Red)

Colour Double Set Blue + Red (+ replacement sleeve in Grey)

Dimensions 60x70 mm

Weight 65 g

Material ABS / Silicone

Battery Type 5 V/1 A Li-Ion

Battery Capacity 300 mAh



START-UP & USE

- Fully charge the device
- Attach the supplied cord to the thread of the Pet Toy
- Press the **multifunction button** for 2 seconds to switch the Pet Toy on/off.
- Switch the mode with a short click on the **multifunction button**
 - a. Fast mode (blue LED 
 - b. Slow mode (purple LED 
 - c. Interactive mode (green LED 
- If the Pet Toy is active in fast mode for longer than 10 minutes, it switches to standby mode! The device is reactivated by tapping/touching it.
- If the LED  in the device starts to flash red quickly, the battery is low and needs to be recharged



RECOMMENDED MODES

On a thin carpet



- Fast mode
- Slow mode
- Interactive mode

On a thick carpet



- Fast mode
- Interactive mode

On smooth floors (tiles, parquet, linoleum, etc.)



- Fast mode
- Slow mode
- Interactive mode



FEATURES



For cats

The Pet Toy is designed for cats as an indoor activity toy



Built-in rechargeable battery

The built-in rechargeable Li-Ion battery allows for long periods of play before the toy needs to be recharged.



Bird sounds

The pet toy makes bird noises when it plays, encouraging the cat to play.



Standby mode

After ten minutes of play in fast mode, the pet toy automatically goes into standby mode and saves the battery.



3 modes

With three different modes, new play incentives can be created for the cat again and again.



INSTRUCTIONS & CLEANING

- The product makes bird noises
- The silicone cover can be removed and washed
- If the device rolls slower than usual, please clean the device and remove the hair.
- If the buttons on the ball cannot be pressed as usual, check that the silicone cover is properly seated

CUSTOMER SERVICE



Declaration of conformity

Stage10 GmbH hereby confirms that the pet toy described in this user manual complies with the relevant guidelines. The full text of the EU Declaration of Conformity is available at the following Internet address:



<https://support.pettec.de/hc/de>



Declaration of conformity (see chapter „Declaration of conformity“): Products designated with this symbol fulfill all applicable community provisions of the European Economic Area.



MANUFACTURER INFORMATION AND SERVICE

If you have questions about the PetTec Plush Pet Toy or experience problems using it, first contact us via email at the following address:
info@PetTec.de

PetTec® is a brand of
Stage10 GmbH, Oranienburger Str. 45, 10117 Berlin, www.PetTec.com

You can find further information about our products, troubleshooting,
and helpful tips at:
support.PetTec.de



WASTE DISPOSAL



Disposing of packaging

Please sort the packaging before disposal:

- Cardboard and paperboard with paper recycling
- Plastic wrap with recyclables



Disposal of devices

Applicable in the European Union and other European countries with systems for the separate collection of recyclables.



Disposal in accordance with WEEE (Waste Electrical and Electronic Equipment Directive): All products labelled with the „crossed-out wheelie bin“ symbol must not be disposed of with household waste. They must be collected separately. The local authorities have set up collection points where old



appliances from private households can be collected free of charge. If not disposed of properly, hazardous substances from electrical and electronic equipment can be released into the environment.



Do not dispose of used devices with household trash!

If your Plush Pet Toy is no longer usable, each user is obligated by law to dispose of used devices separately from household trash, e.g. at a collection site in your municipality. This ensures that used devices are recycled properly and that negative environmental effects are avoided. Therefore, electronic devices are marked with the symbol shown here.



PetTec

Interactive Ball

Single & Double Set

PetTec Toy Interactive Ball

Single Set

Art No. 16373

EAN: 4 250541 928165

PetTec Toy Interactive Ball

Double Set

Art No. 16375

EAN: 4 250541 928189

WEBSITE & SHOP

www.PetTec.com

INFOS, MANUALS & SUPPORT

support.PetTec.de

PetTec[®] ist eine Marke
der Stage10 GmbH
Oranienburger Str. 45
10117 Berlin
Germany



Made in China