

PETTEC

Snoop Cube

Pet Cam

WATCH YOUR PET

For a rewarding
relationship





HERE WE GO...

Thank you for choosing our pet cam. With the PetTec Snoop Cube you'll always have your darling in view.

Important safety instructions



READ ALL INSTRUCTIONS AND WARNINGS IN THIS OPERATING
MANUAL BEFORE USING THE SNOOP CUBE.

- Please do not disassemble and modify the PetTec Snoop Cube. The device requires neither maintenance nor servicing. In case of malfunction, please contact our customer service.
- In order to ensure proper use of the device, we recommend that you only use the original parts. Use only the supplied assembly parts for mounting the device.
- Keep the camera away from external exposure to ensure long term use. The device should not be affected by any renovation work, be it the use of paint or wallpaper.

Legal Notice


- The PetTec Snoop Cube has been designed for indoor use only. Laws in your country may limit observation of areas outside of your home or property. Please inform yourself about local legislation. To protect the privacy of others, mount the camera so that you cannot record images of public areas, streets, or your neighbor's property. We also recommend informing relatives, visitors and domestic workers about the camera and its function.
- Please note that the app will not inform you automatically in case of emergency or burglary. If necessary, an emergency call must always be placed by yourself. Stage10 GmbH does not provide any form of guarantee for missing or incorrect notifications or recordings.

PRODUCT OVERVIEW

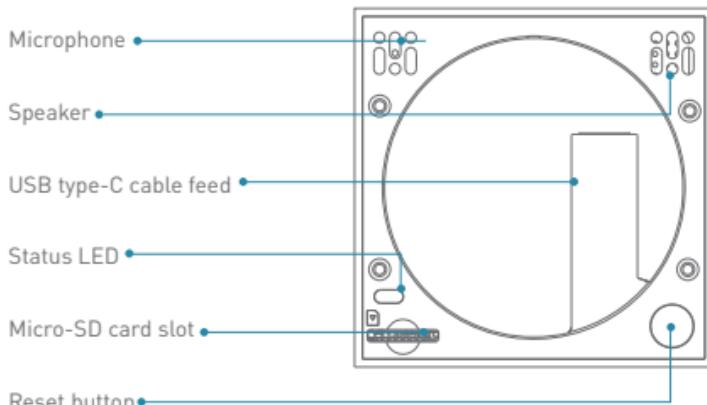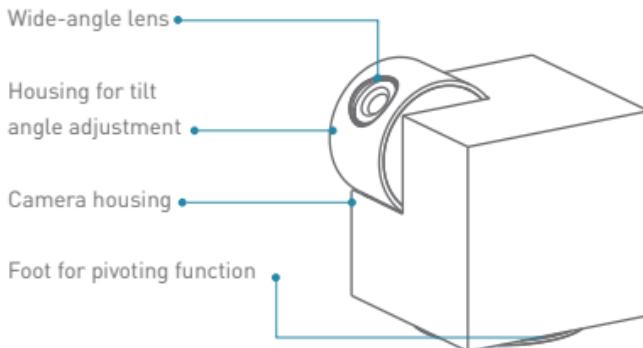

Content:

- PetTec Snoop Cube
- USB type-C cable
- Power plug
- Mount
- Screws
- Adhesive surface

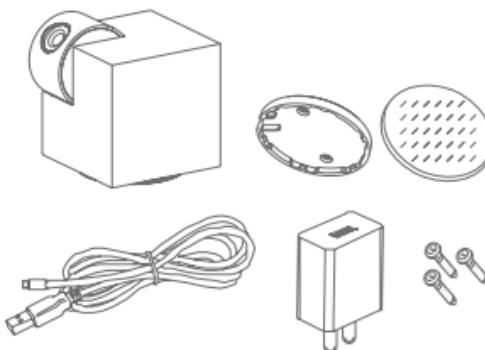



IMPORTANT INSTRUCTIONS

Status LED display

- Permanently red LED – no connection to internet possible
- LED blinking red – ready to connect to Wi-Fi
- LED blinking red quickly – Wi-Fi connection is in progress.

- Permanently blue LED – connection to Wi-Fi works properly
- LED blinking blue – ready for manual connection to Wi-Fi
- LED blinking blue quickly – manual Wi-Fi connection is established.

- No LED – The camera is turned off / not operational.

USB type-C cable feeder

The connector supplies power to the camera. If required, conventional USB type-C cables with different lengths may be used.

Microphone/speaker

The combination of built-in microphone and speaker allows two-way communication.

Micro-SD card slot

Micro-SD cards up to 128GB in size may be used.

Reset button

The reset button must be pressed for approx. 5 seconds to allow the camera to be reset to factory default settings.

To activate manual Wi-Fi setup, the reset button has to be pressed for about 1 second.

GETTING STARTED



1. Please connect the camera with a USB-C cable and plug it into a mains plug. The power plug must be connected to a power socket. **Fully charge the camera battery before using the device!**
2. Switch on the camera. After approximately one minute, the camera is ready to be connected to the app and flashes red. Open the app (the QR code for downloading can be found below) and press the + symbol in the top right-hand corner. As a rule, a pop-up notification will now appear at the bottom of the screen. Press it to connect the camera to the app.
3. The camera is connected to the PetTec app via Bluetooth. The camera is permanently connected to the app or your smartphone via Wi-Fi.






MOUNTING OPTIONS*


Mounting via wall bracket

1. Drill two holes and insert the dowels suitable for your wall (sold separately).
2. Then screw the bracket to the wall with the screws provided.

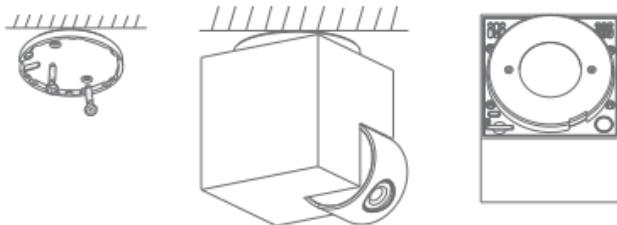

Mounting via adhesive surface

1. Note that the surface to be covered on the mount must be free of dirt.
2. Place the round adhesive pads on the round support surface.
3. Please also pay attention to the mounting surface (wall, ceiling etc.). For best results, this surface should be dirt-free and completely flat.

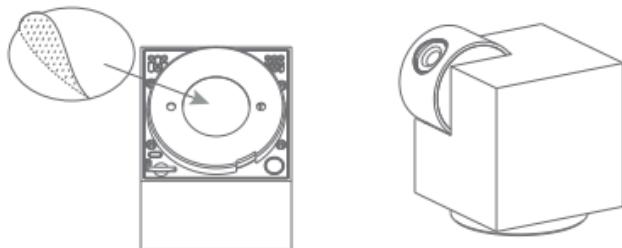

* Alternatively, you can simply put the camera down somewhere.

TECHNICAL DETAILS



Requirements	<ul style="list-style-type: none">• High-Speed-Internet• WiFi Connection• Frequency 2.4 GHz or 5 GHz• Power connection
Data storage	<ul style="list-style-type: none">• Supports Micro-SD cards up to 128 GB• Micro-SD cards available separately (Requires class 10 oder higher)
Video & Audio	<ul style="list-style-type: none">• 3MP RGB resolution 2304x1296px, 30fps• Format: H.265• Field of vision: 120°• Field with pan/tilt function: 350°
Image sensor	<ul style="list-style-type: none">• Night vision: up to 10 m• Full color• CMOS• Digital zoom
Audio	<ul style="list-style-type: none">• Loudspeaker• Microphone
Motion and noise detection	<ul style="list-style-type: none">• Motion detection: 3 available settings• noise detection: 3 available settings• Instant E-Mail alarm & push notifications
Measures & weight	<ul style="list-style-type: none">• Measures: 63,5 x 63,5 x 57mm
Camera	<ul style="list-style-type: none">• Weight: 180g
WiFi	<ul style="list-style-type: none">• Compatible with 2.4GHz and 5GHz networks



IMPORTANT INFORMATION

Radio signal

The radio transmission signal may be adversely affected by external influences (e.g., electric motors, defective electrical appliances). The range of the radio transmission signal is usually weaker within buildings than in the open field. Similarly, the structural works/conditions affect the radio range of the device. Bluetooth devices such as headphones or speakers can also negatively affect the radio signal of the device. The signal strength can also be reduced by environmental influences such as humidity.

Environmental protection

Please note that non-disposable electrical and electronic appliances as well as batteries must be recycled separately and in an environmentally friendly manner (European Directive on Waste Electrical and Electronic Equipment). Use the country-specific return and collection systems for the recycling of electrical and electronic appliances as well as for batteries. Disposal of batteries in household waste is prohibited.

CUSTOMER SERVICE



Declaration of conformity

Stage10 GmbH confirms that the product described in these instructions (Pet Cam Snoop Cube) conforms to guideline 2014/53/EU. The complete text of the EU declaration of conformity is available at the following URL:



<https://support.pettec.de/hc/de>



Declaration of conformity [see chapter „Declaration of conformity“]: Products designated with this symbol fulfill all applicable community provisions of the European Economic Area.

MANUFACTURER INFORMATION AND SERVICE

If you have questions about the PetTec Snoop Cube or experience problems using it, first contact us via email at the following address: info@PetTec.de

PetTec® is a brand of
Stage10 GmbH
Oranienburger Str. 45
10117 Berlin
www.PetTec.com



DISPOSAL



Disposing of packaging

Please sort the packaging before disposal:

- Cardboard and paperboard with paper recycling
- Plastic wrap with recyclables



Disposal of devices

Applicable in the European Union and other European countries with systems for the separate collection of recyclables.

Do not dispose of used devices with household trash!

If your Pet Cam Snoop Cube is no longer usable, each user is obligated by law to dispose of used devices separately from household trash, e.g. at a collection site in your municipality. This ensures that used devices are recycled properly and that negative environmental effects are avoided. Therefore, electronic devices are marked with the symbol shown here.

You can find further information about our products, troubleshooting, and helpful tips at: support.PetTec.de

