


**PetTec**

# Pet Cam Free'n 360°

4G Version

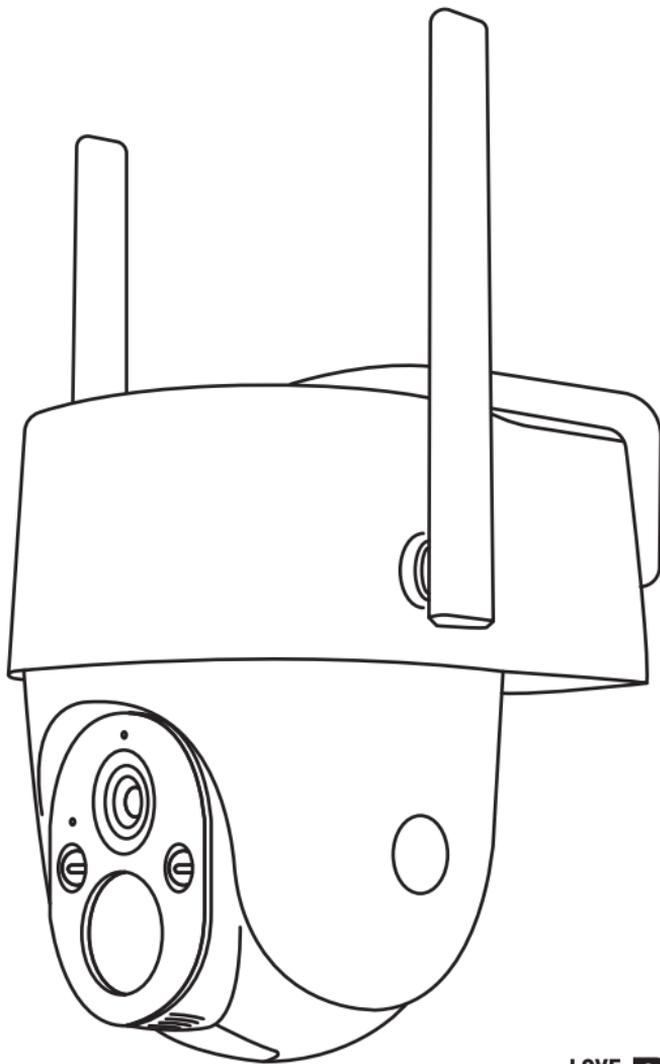

LOVE  
YOUR **PET**



## HERE WE GO...

Thank you for choosing our pet cam. With the **PetTec Pet Cam Free'n 360°** you'll always have your darling in view.

### Important safety instructions


READ ALL INSTRUCTIONS AND WARNINGS IN THIS OPERATING MANUAL BEFORE USING THE PET CAM FREE'N 360°.

- Please do not disassemble and modify the PetTec Pet Cam Free'n 360°. The device requires neither maintenance nor servicing. In case of malfunction, please contact our customer service.
- In order to ensure proper use of the device, we recommend that you only use the original parts. Use only the supplied assembly parts for mounting the device.
- Keep the camera away from external exposure to ensure long term use. The device should not be affected by any renovation work, be it the use of paint or wallpaper.

### Legal Notice


- The PetTec Pet Cam Free'n 360° has been designed for indoor and outdoor use only. Laws in your country may limit observation of areas outside of your home or property. Please inform yourself about local legislation. To protect the privacy of others, mount the camera so that you cannot record images of public areas, streets, or your neighbor's property. We also recommend informing relatives, visitors and domestic workers about the camera and its function.
- Please note that using the Pet Cam Free 360° does not automatically inform you via the app in emergencies or in the event of break-ins, for example. If necessary, an emergency call must always be made by you. Stage10 GmbH accepts no liability for missing or incorrect notifications or recordings.

# PRODUCT OVERVIEW I

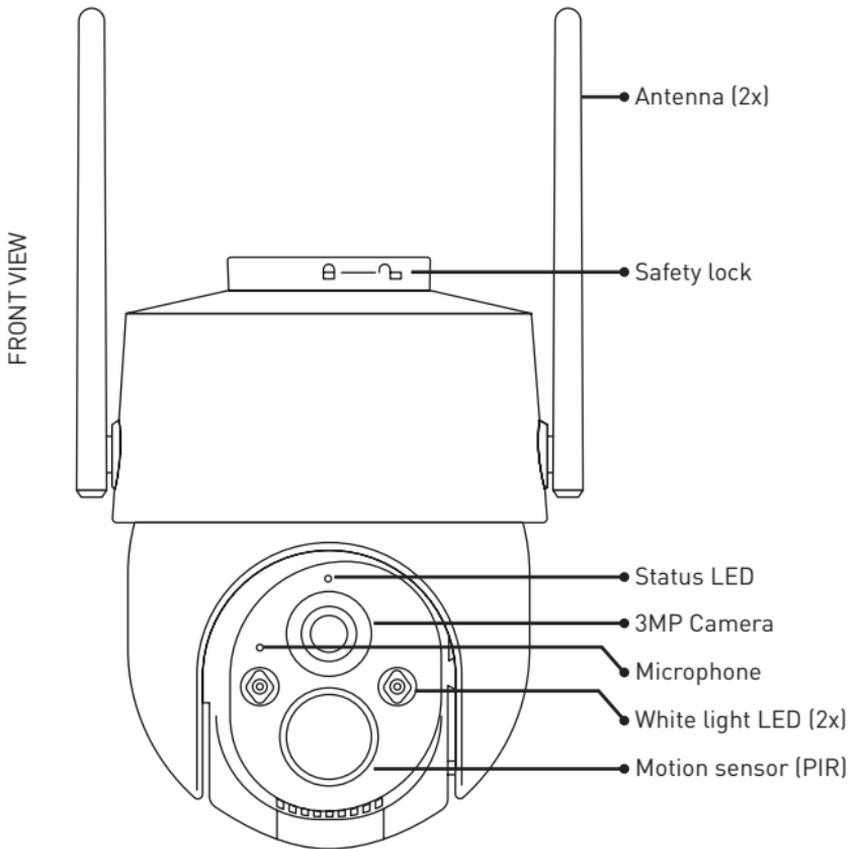



## PRODUCT OVERVIEW II

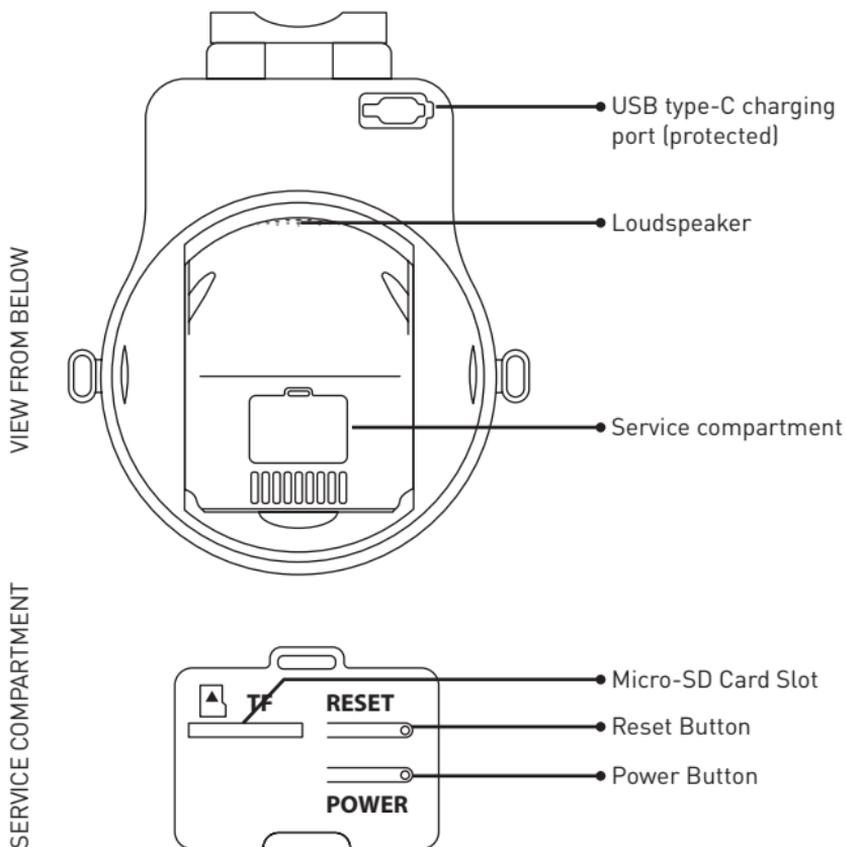

## CONTENTS

- Pet Cam Free'n 360°
- Angle bracket
- 4 Screws + dowels
- 2 Metal loops
- USB type-C Cable
- Manual

# IMPORTANT INSTRUCTIONS



## Status LED display

- Slowly flashing red LED - camera is started and ready to be connected to the app.
  - Red fast flashing LED - 4G connection is being established. Try resetting the camera if the LED flashes quickly for a longer period of time.
- 
- Red and blue LED flashing alternately - connection to the app not possible! Please check whether the 4G service is active.
- 
- Blue flashing LED - The camera is currently being initialised and connected
  - LED lights up blue - The camera is connected

## Switching on and off

Press the power button in the service compartment for three seconds (until the LED lights up red) to switch the appliance on or off.

## USB type-C cable

The connector supplies power to the camera. If required, conventional USB type-C cables with different lengths may be used.

## Microphone/speaker

The combination of built-in microphone and speaker allows two-way communication.

## Micro-SD card slot

The micro-SD card slot is located at the top of the treat tank under a cover (see diagram). Micro-SD cards up to 512 GB may be used.

## Reset Button

The reset button must be pressed for approx. 5 seconds to reset the camera to the factory settings.



## 4G USAGE

The **Pet Cam Free 4G** offers various options to ensure a permanent connection with the app.

### **Mobile radio 4G**

The Pet Cam Free 4G is operated entirely without restrictive WiFi using the 4G mobile network. This is a good option for positioning the camera freely without having to worry about WiFi coverage.

You can easily book a fast 4G service via the PetTec app. If the mobile network coverage at the camera's location is good, you don't have to worry about anything else.

### **Ready to go with 4G**

So that you can start using the camera immediately, we are giving you 3 days of LTE use with the built-in e-Sim. The duration starts to run from the time of commissioning (see there) and connection of the app with the Pet Cam Free 4G.

If you pass the camera on to someone else - and it is connected to a new Pet-Tec user account - the 3 days start again from the beginning. So everyone can immediately test the camera's many functions.

Fair use: This is possible up to 4 times.



## GETTING STARTED

1. Please connect the camera with the enclosed charging cable to fully charge the camera before using it for the first time. You are using a CE-certified mains plug from another manufacturer.
2. Switch on the camera by pressing the on/off switch. After approx. 30 seconds, the camera is ready to be connected to the app.
3. Open the app (the QR code for downloading can be found below) and click on the + symbol and then on 'Scan code'.
4. Now scan the QR code on the back of the camera and follow the instructions in the PetTec app.
5. **The camera is permanently connected to the app or your smartphone exclusively via the 4G mobile phone connection of PetTec's chargeable service.**
6. Ensure the wireless quality when setting up the camera! Always check the quality of the wireless connection before permanently installing the camera at a location!

**The use of a chargeable 4G service from PetTec is mandatory in order to utilise the camera's full range of functions.**

**Important:** Fully charge the device when using it for the first time or after a longer break. This can take up to 4 hours!



## FEATURES

### **Pan/tilt**

The camera image can be rotated/tilted in the app to obtain a viewing angle of almost 360 degrees.

### **Colour Vision**

Thanks to the two white light LEDs, the recorded images and videos of motion detection are in colour.

### **Two-way audio**

If you see a visitor in the camera's live view, you can speak to them and communicate with them via your app function.

### **PIR**

If someone walks past, an alarm is triggered and sent to your smartphone.

### **Motion detection**

The camera can be activated from a great distance (up to 10 metres) by detecting people. The camera sends you push notifications and app notifications as soon as human movement is detected.

### **Recording**

Use a micro SD card or save events with the Cloud Event Service Cloud+ so you never miss a thing.

### **Day&Night**

With the powerful night vision technology, you have a good view even in the dark (up to 10m).

# MOUNTING THE CAMERA I




## Mounting options:

You have numerous options for mounting the camera so that you can use it flexibly outdoors:

- Wall mounting
- Overhead mounting
- Setting up the camera
- Mounting on a tree or pole

## WALL MOUNTING

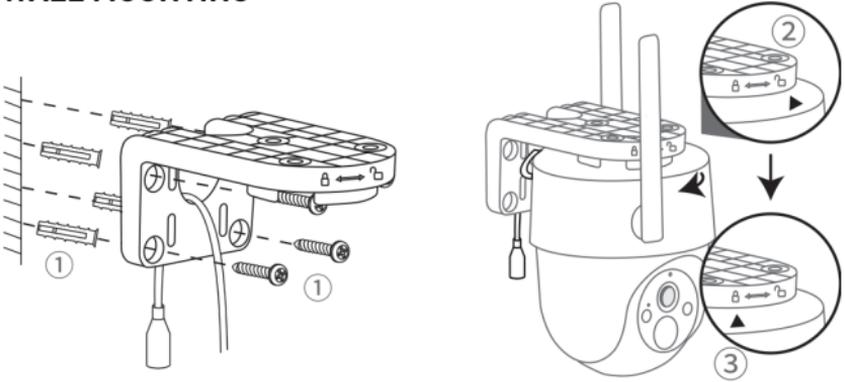


1. Drill 4 holes in the wall at the correct spacing. Insert the 4 wall plugs supplied and screw the angle bracket to the wall using the screws supplied and tighten them.
2. Insert the camera into the angle bracket and align the black arrow with the  symbol of the safety lock on the bracket.
3. Now turn the camera to the left until it clicks into place. The black arrow now points to the  symbol of the safety lock.



## MOUNTING THE CAMERA II


### OVERHEAD MOUNTING

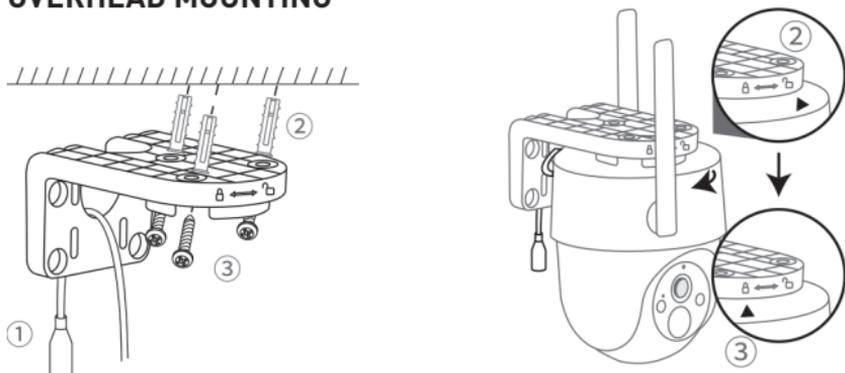

1. Drill 4 holes at the correct spacing in the ceiling or wall projection. Insert the 4 wall plugs supplied and screw the angle bracket to the ceiling or wall projection using the screws supplied and tighten them.
2. Insert the camera into the angle bracket and align the black arrow with the  symbol of the safety lock on the bracket.
3. Now turn the camera to the left until it clicks into place. The black arrow now points to the  symbol of the safety lock.

### SETTING UP


1. Alternatively, you can simply set up the camera.
2. Simply turn the aerials upwards and place the camera firmly on the safety catch.
3. Deactivate 'Screen flip' in the app. You find the function in the camera settings > Image settings

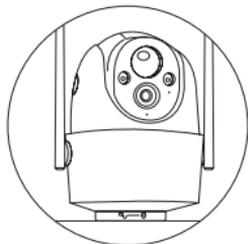


# MOUNTING THE CAMERA III



## MOUNTING ON A TREE OR POLE

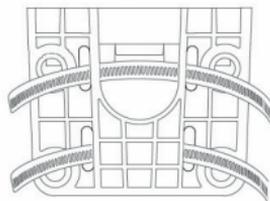

1. 2 metal loops are included for attaching to a tree or pole. These can be used for fastening with a diameter of approx. 30mm to 270mm.
2. Remove the angle bracket from the camera and guide the loops through the existing holes.
3. Pull the metal loops around the tree or pole and push the end into the lug so that the bracket is firmly attached to the trunk. Close the loop with a Phillips screwdriver (not supplied).
4. Insert the camera into the angle bracket and align the black arrow with the safety lock symbol  on the bracket.
5. Now turn the camera to the left until it clicks into place. The black arrow now points to the safety lock symbol .

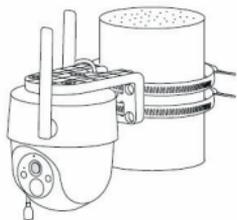

### Tip:

You can also open the metal loops again with a Phillips screwdriver and move the camera to another location.



## TECHNICAL DETAILS

- |                     |  |
|---------------------|--|
| <b>Requirements</b> | <ul style="list-style-type: none"><li>• PetTec e-Sim service with unlimited monthly data volume (subject to a charge, see PetTec app for prices)</li></ul> |
|---------------------|--|

- 
- |                     |  |
|---------------------|--|
| <b>Data storage</b> | <ul style="list-style-type: none"><li>• Supports Micro-SD cards up to 256 GB</li><li>• Micro-SD cards available separately (Requires class 10 oder higher)</li></ul> |
|---------------------|--|

- 
- |              |  |
|--------------|--|
| <b>Video</b> | <ul style="list-style-type: none"><li>• Resolution: 3MP 2304x1296 pxl. HD 25fps</li><li>• Format: H.265</li><li>• Shutter speed: 1/20-1/10000s</li><li>• Field of vision: 120°</li><li>• Field of vision with pan and tilt function<br/>Function: 355°</li></ul> |
|--------------|--|

- 
- |                         |  |
|-------------------------|--|
| <b>Alarm triggering</b> | <ul style="list-style-type: none"><li>• Motion detection up to 10m range by day day</li><li>• Night vision: up to 10 m (also in color)</li></ul> |
|-------------------------|--|

- 
- |                     |  |
|---------------------|--|
| <b>Image sensor</b> | <ul style="list-style-type: none"><li>• Digital Wide Dynamic Range - For improving image quality with large differences in brightness</li><li>• Color 0.1Lux@F2.0</li><li>• 1/2.8" 3 Megapixel CMOS</li><li>• Digital-Zoom</li></ul> |
|---------------------|--|

- 
- |              |  |
|--------------|--|
| <b>Audio</b> | <ul style="list-style-type: none"><li>• Front loudspeaker</li><li>• Front microphone</li></ul> |
|--------------|--|

- 
- |                         |   |
|-------------------------|---|
| <b>Motion detection</b> | <ul style="list-style-type: none"><li>• Immediate push notifications via PetTec App when motion is detected</li></ul> |
|-------------------------|---|

- 
- |                                |  |
|--------------------------------|--|
| <b>Dimensions &amp; weight</b> | <ul style="list-style-type: none"><li>• Dimensions: 134x124x138mm</li><li>• Weight: 637g</li></ul> |
|--------------------------------|--|

- 
- |               |   |
|---------------|---|
| <b>Colour</b> | <ul style="list-style-type: none"><li>• White</li></ul> |
|---------------|---|



---

**Integrated rechargeable battery**

- Battery capacity: 10,400mAh
  - Charging via USB-C cable via USB power adapter
  - Charging via solar panel possible
- 

**Power supply**

- Consumption in stand-by mode: 200-800 $\mu$ A
  - Consumption in work mode: 150-200mA
  - Maximum power consumption: 4.5W
  - Rated power input (USB-C): DC 5V/1A
- 

**Outdoor use**

- Protection class: IP65 - Weatherproof / protected against water jets
- Temperature range: -20° to +50°

## IMPORTANT INFORMATIONS

**Requires sufficient 4G LTE radio signal**

When installing the camera, it must be ensured that a good 4G network quality is available at the intended location. Therefore, check the connection first and only attach the camera once a good connection has been ensured.

**Radio signal**

The radio transmission signal may be adversely affected by external influences (e.g., electric motors, defective electrical appliances). The range of the radio transmission signal is usually weaker within buildings than in the open field. Similarly, the structural works/conditions affect the radio range of the device. Bluetooth devices such as headphones or speakers can also negatively affect the radio signal of the device. The signal strength can also be reduced by environmental influences such as humidity.

**Environmental protection**

Please note that non-disposable electrical and electronic appliances as well as batteries must be recycled separately and in an environmentally friendly manner (European Directive on Waste Electrical and Electronic Equipment). Use the country-specific return and collection systems for the recycling of electrical and electronic appliances as well as for batteries. Disposal of batteries in household waste is prohibited.



## TROUBLESHOOTING

### **My PetCam cannot be displayed correctly in the preview?**

Check whether the network quality at the PetCam installation site is good enough. If this is not the case, select a different location.

### **Why is the device still in the device list after resetting?**

When the device is reset, the network configuration is reset. To delete the device from the list, please start the app and delete your device.

### **How can I change the Wi-Fi network to another one?**

First remove the device from the list and reset it. Then connect your phone to the new target Wi-Fi network and add the device to the app again.

### **Why does the device not recognise the micro SD card?**

It is recommended to insert the card while the camera is switched off. Only then switch the camera on again. Check whether the card is recognised in another device and whether it has been formatted in FAT32 format. The micro SD card cannot be recognised if the internet connection is poor.

### **Why am I not receiving any notifications with the app?**

Please make sure that the app is running on the phone and that the corresponding reminder function is activated. Also make sure that the permission to send notifications has been activated for this app in the settings of your smartphone.

## CUSTOMER SERVICE



### Declaration of conformity

Stage10 GmbH confirms that the product described in these instructions (Pet Cam Free'n 360°) conforms to guideline 2014/53/EU. The complete text of the EU declaration of conformity is available at the following URL:



<https://support.pettec.de/hc/de>



**Declaration of conformity** (see chapter „Declaration of conformity“): Products designated with this symbol fulfill all applicable community provisions of the European Economic Area.

## MANUFACTURER INFORMATION AND SERVICE

If you have questions about the PetTec Free'n 360° or experience problems using it, first contact us via email at the following address:  
**info@PetTec.de**

PetTec® is a brand of  
**Stage10 GmbH**  
Oranienburger Str. 45  
10117 Berlin  
[www.PetTec.com](http://www.PetTec.com)

---

You can find further information about our products, troubleshooting, and helpful tips at:

**support.PetTec.de**

---



## DISPOSAL



### Disposing of packaging

Please sort the packaging before disposal:

- Cardboard and paperboard with paper recycling
- Plastic wrap with recyclables



### Disposal of devices

Applicable in the European Union and other European countries with systems for the separate collection of recyclables.

### **Do not dispose of used devices with household trash!**

If your Pet Cam Free'n 360° is no longer usable, each user is obligated by law to dispose of used devices separately from household trash, e.g. at a collection site in your municipality. This ensures that used devices are recycled properly and that negative environmental effects are avoided. Therefore, electronic devices are marked with the symbol shown here.



**PetTec**

# Pet Cam Free'n 360°

4G Version



4 250541 927717

## Pet Cam Free'n 360°

4G/LTE Version | White

Art No. 16299



4 250541 928486

## Pet Cam Free'n 360°

4G Version | White | Sim-Lock

Art No. 16393



◀ **INFOS, MANUALS & SUPPORT**  
[support.PetTec.de](http://support.PetTec.de)

PetTec© ist eine Marke der  
Stage10 GmbH

Oranienburger Str. 45  
10117 Berlin  
Germany

[www.PetTec.com](http://www.PetTec.com)

