

PetTec

Modular Vibra Trainer
Vibration collar for anti-bark and remote training¹



**TEACH
YOUR DOG**

For a rewarding
relationship

¹By purchasing a Modular Remote



Inhaltsverzeichnis

Table of contents | Table des matières

Introduction	3
Product overview	4
Initial operation	5
Application	7
Charging the battery	9
Charging the Modular Vibra Trainer	10
Proper dog training	11
Connecting the remote and trainer	12
Customer service	15
Explanation of symbols and terms	16



Introduction

Thank you for choosing our product. The Modular Vibra Trainer is a brand new effective aid for correcting unwanted behaviour of your dog.

Important

- Read the instructions and safety instructions before using the product.
- The Modular Vibra Trainer can also be used as a remote trainer in conjunction with a Modular Remote (available separately). Without this remote, it automatically reacts to your dog's barking (anti-bark mode) and emits a vibration signal.

Good to know

- In the following, the Modular Vibra Trainer means the training collar and the Modular Remote the remote control.
- In the following, we will talk about remote training if the training collar is operated manually using the separately available remote control.
- The anti-bark mode describes the function in which the collar responds to a dog's barking.

Safety information

For safe initial operation, please note the following:

- Our products are designed exclusively for training dogs.
- Only suitable for targeted training sessions and not for continuous use (max. 1-2 hours per day).
- Keep away from children.
- Do not unscrew or modify the device yourself.
- Do not expose the device to hot sources such as fire or prolonged direct sunlight.
- Do not immerse the device in water or other liquids.



Product overview

Package contents

- Modular Vibra Trainer + collar
- Micro USB charging cable
- Instructions

Overview of the trainer

- 1 Search lights
- 2 On/off switch
- 3 LED Display
- 4 Adjustment buttons
- 5 Micro USB charging port
- 6 Microphone (for barking detection)
- 7 Ergonomic vibration contacts



Technical specifications

Single Modular Vibra Trainer with anti-bark function

- | | |
|---------------------------------|----------------------------------|
| ✓ 5 vibration signals | ✓ < 2h charging time |
| ✓ 5 sound signals | ✓ Microphone (barking detection) |
| ✓ 5 levels of sensitivity | ✓ LED display |
| ✓ Ergonomic shape | ✓ Weight: 100 g |
| ✓ IP65 water protection | ✓ Neck size: 20-67 cm |
| ✓ Up to 10 days of battery life | ✓ Dimensions: 70 x 33 x 34 mm |

Modular Vibra Trainer in combination with Modular Remote

- ✓ Training at a distance of 600 m
- ✓ Searchlight at the push of a button
- ✓ 2 dogs can be trained in parallel*

Note: The full range of functions of the product can only be obtained with the Modular Remote, which is available separately.

*Control 2 collars simultaneously via the remote control.



Initial operation

- 1 The trainer is activated by pressing the power button and a number in **blue** can be seen on the LED display. This number represents the current battery level and can vary between 0 and 3. A »0« indicates the weakest battery level, whereas a »3« means that the battery is fully charged.
- 2 In normal operation, a number appears on the display only when the Modular Vibra Trainer emits a vibration signal triggered by barking.




To switch off the Modular Vibra Trainer, the switch-off button must be pressed for several seconds until you hear a double beep.



Attaching the collar

The collar must be properly secured so that the vibration signal will be effective. You can test for a proper fit by ensuring that you can fit one or two fingers beneath the collar. The optimal position of the PetTec Modular Vibra Trainer is directly under the dog's nose.

Be careful that the collar is not too tight, but do not allow it to slip; otherwise the signal will not be effective.

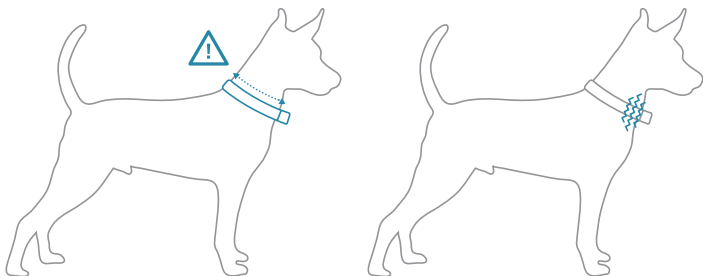

Application

1 Microphone sensitivity adjustment button

The Modular Vibra Trainer has 5 different sensitivity levels, which can be adjusted using the setting button. At level »5«, the trainer is most sensitive to barking, whereas level »1« is the least sensitive setting.

2 Tone level setting button

The Modular Vibra Trainer offers 5 different tone levels. Level »1« is the shortest tone signal, while »5« is the most intense and longest tone level. If only one sound signal is to be used in anti-bark mode, the vibration signal must be switched off manually by pressing the sound button for 3 seconds.

Note: In anti-bark mode, only the vibration or sound signal can be applied at the same time.

3 Vibration intensity adjustment button

Overall, the Modular Vibra Trainer offers exactly 5 different vibration intensities. »1« is the lowest vibration intensity, level »5« the strongest vibration level. If only a vibration signal is to be used in anti-bark mode, the sound signal must be switched off manually by pressing the vibration button for 3 seconds.

Note: In anti-bark mode, only the vibration or sound signal can be applied at the same time.





Individually suitable training signal strengths

The Modular Vibra Trainer offers 5 different training signal levels, whereby level »1« is the weakest signal and level »5« the strongest. The right training signal level for your dog, whether sound or vibration signal, depends on the temperament and the sensitivity to the respective signal. Therefore, always start with the weakest level and work your way up until you have found the right strength. Your dog shows a slight reaction when the appropriate training signal level has been found. One of these reactions can be seen, for example, by the tension in the neck muscles. If the training signal remains unnoticed, a higher level is necessary.

Maximum range in connection with the separately available Modular Remote* remote control

The Modular Vibra Trainer in conjunction with the Modular Remote can transmit training signals over a distance of 600 m. The range may vary depending on the environment. To maximise the range, the remote control can be held up higher. In conjunction with the remote control, the Modular Vibra Trainer no longer reacts to your dog's barking, but only to the push of a button on the remote control.

*Modular Remote is sold separately.




Charging the battery

- Charge the battery fully before the first use; this can take up to 4 hours.
- Do not charge the battery near flammable substances.
- The device's battery must be fully charged if it was last used more than three months ago.

The battery requires charging when:

- a »1« can be seen on the LED display of the trainer during operation.
- the vibration signal is weaker than usual.
- the trainer can no longer be switched on.
- a »1« or »0« can be seen on the LED display.

The charge status of the battery can be tracked using the LED display. The higher the number on the display, the more fully the battery is charged. The Modular Vibra Trainer is thus fully charged when a »3« can be seen on the LED display.

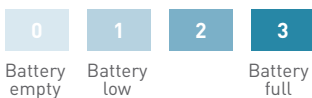

Important notes

- The Modular Vibra Trainer is only partially charged when shipped. The first full battery charge takes up to 4 hours.
- The trainer can be used with any commercially available micro USB charger.




Charging the Modular Vibra Trainer

Fully charge the Modular Vibra Trainer battery using the micro USB charging cable until a »3« is shown on the LED display. As long as the LED display shows a number between »1« and »2«, the battery is not fully charged.

Charging the trainer

- To charge, open the rubber cover on the bottom of the Modular Vibra Trainer and plug the micro USB charging cable into the opening provided.
- Then connect the USB port to the adapter and plug the charger into an electrical outlet.
- A full charging phase takes about 2 hours, the first charge about 4 hours.
- The Modular Vibra Trainer can be charged with any commercially available micro USB charger. Alternatively, the Modular Vibra Trainer can also be charged with USB connections from notebooks, power banks and similar devices.

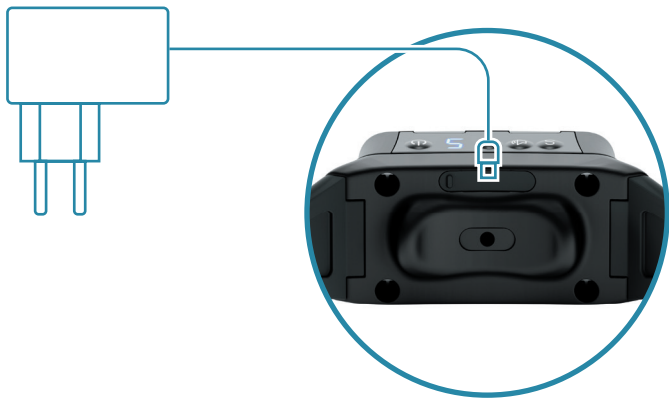



Proper dog training

Good dog training is the key to a harmonious coexistence of dog and person, but dog owners often come up against their own limits when raising their four-legged friends.

The Modular Vibra Trainer is an innovative aid for your other dog training in order to effectively get rid of undesirable behaviours in your pet. The Modular Vibra Trainer reacts immediately to your dog's barking and triggers a vibration signal. Your dog links the barking in the training situation directly with this signal and usually refrains from barking immediately.

Please note that the trainer is a training device and not a toy, which should always be used carefully. We would therefore like to ask you at this point, to take the following advice into consideration:

Before the training

1. Make sure your dog's misconduct is not due to a lack of physical activity or health problems. In this case, please do not use the trainer and seek professional advice.
2. Use the trainer in anti-bark mode only in closed rooms. Make sure that no loud external noises can trigger the trainer in an uncontrolled manner.
3. Get your dog used to the Modular Vibra Trainer for a day before turning it on.
4. Select a familiar environment for the training.

During the training

1. If your dog's behaviour is disturbed, remove the trainer immediately. The trainer is not intended for daily use, but only for targeted training sessions.
2. Train with your dog under supervision for a maximum of 1-2 hours a day. Remove the trainer after each training and switch it off.
3. Check after the 2nd to 3rd try to see if your dog responds to the Modular Vibra Trainer and refrains from barking. If your dog does not respond, you should use a different training method.
4. Always reward your dog after successful training runs!



Connecting the remote and trainer

Important

- The Modular Vibra Trainer can only be connected to the PetTec Modular Remote, so you can also use the device for remote training. The remote control Modular Remote is available separately!
▶ <https://pettec.de/shop/trainer/>
- Read the instructions and safety instructions for the Modular Remote carefully before use.
- Only connect and disconnect the Modular Remote if the training collar has not been attached to the dog.

Tips

- Please fully charge the remote control and training collar before connecting.
- The Modular Remote (sold separately) works with both training collars, both the Modular Vibra and the Modular Spray Trainer (sold separately).
- Up to 2 training collars can be connected to the Modular Remote. Accordingly, you can use a Modular Vibra as well as a Modular Spray Trainer combined with the Modular Remote.

Initial connection of remote control and a training collar (remote training)

Note: See photo gallery p. 14

1. Turn on the training collar and check the battery level.
2. Then press the »S« (Sensitivity) button on the training collar for several seconds until you hear a beep and a »P« (pairing) lights up on the LED display. The training collar is now in connection mode for approx. 20 seconds.
3. Now take the Modular Remote and press the »Up« and »Light« buttons simultaneously for several seconds. The notification LED on the remote control now flashes red three times in succession and signals that the connection is ready.



4. Now the remote control connects to the training collar within a few seconds. If the connection is successful, there is a beep and the notification LED on the trainer lights up green.
5. To test, press the **»Light«** button on the remote control. If both devices are successfully connected, the two LEDs on the training collar now flash.
6. Please start at step 1 if the connection between the remote control and the training collar has failed.

General disconnection and connection of remote control and a training collar

Disconnect both devices to use anti-bark mode

1. Make sure that both devices are switched on.
2. Now take the Modular Remote and press the **»Up«** and **»Light«** buttons simultaneously for several seconds. The notification LED on the remote control now flashes red three times in succession and a beep sounds.
3. Both devices are now separated from each other and the training collar can be used as an anti-bark training device without any remote control.

Reconnect remote control and collar

1. Make sure that both devices are switched on.
2. Now take the Modular Remote and press the **»Up«** and **»Light«** buttons simultaneously for several seconds. The notification LED on the remote control now flashes red three times in succession and signals that the connection is ready.
3. Now the remote control connects to the training collar within a few seconds. If the connection is successful, there is a beep and the notification LED on the trainer lights up green.
4. Now you can use the two devices again for remote training.

Note

To connect a training collar to a completely new remote control, you have to go through the steps of the initial connection.



Connect a second training collar

1. Set the switch for selecting the training collar on the remote control from 1 to 2.
2. Turn on the training collar and check the battery level.
3. Then press the »S« (Sensitivity) button on the training collar for several seconds until you hear a beep and a »P« (Pairing) lights up on the LED display. The training collar is now in connection mode for approx. 20 seconds.
4. Now take the Modular Remote and press the »Up« and »Light« buttons simultaneously for several seconds. The notification LED on the remote control now flashes red three times in succession and signals that the connection is ready.
5. Now the remote control connects to the training collar within a few seconds. If the connection is successful, there is a beep and the notification LED on the trainer lights up green.
6. To test, press the »Light« button on the remote control. If both devices are successfully connected, the two LEDs on the training collar now flash.
7. Please start at step 1 if the connection between the remote control and the training collar has failed.



Modular Remote



Modular Vibra Trainer



Customer service

If you have any questions about the Modular Vibra Trainer, please send an email to the following address: info@PetTec.de

PetTec® is a trademark of
Stage10 GmbH
Oranienburger Str. 45
10117 Berlin
www.PetTec.com

You can find more information about our products, troubleshooting and helpful tips on training and dealing with our trainers at:

support.PetTec.de



Explanation of symbols and terms

Declaration of conformity

Stage10 GmbH hereby declares that the Modular Vibra Trainer product described in this operating manual complies with Directive 2014/53/EU.



pettec.de/faq/modular



Declaration of conformity (see chapter »Declaration of conformity«): Products designated with this symbol fulfill all applicable community provisions of the European Economic Area.



This symbol certifies that the device's electromagnetic interference is below the limit approved by the United States Federal Communications Commission.

Disposal



Disposing of packaging

Dispose of the packaging according to type:

- Cardboard and carton to waste paper
- Foils in the recycling collection



Disposing of the device

Applicable in the European Union and other European countries with systems for separate collection of recyclable materials.



Old devices must not be disposed of in household waste!

If the Modular Vibra Trainer can no longer be used, all consumers are required by law to hand over the old devices separate from household waste, for example, at a collection point of their local community/district. This ensures that the old appliances are properly recycled and that negative effects on the environment are avoided. That is why electrical devices are marked with the symbol shown here.

Modular Vibra Trainer

Vibration collar for anti-bark and remote training¹

¹By purchasing a Modular Remote